GB User and Maintenance Handbook

Also contains instructions and regulations for safe installation.
Before installing or using the hood, carefully read and follow the instructions given in this handbook and in the enclosed installation handbook.

⚠ **WARNING:** Be sure to observe the minimum installation distance from cookers, which is indicated in the installation handbook.
If the installation instructions for the gas cooker specify a greater distance, this must be taken into account.

SAFEGUARDING THE ENVIRONMENT

1. Packing

Packing materials are 100% recyclable and are marked with the recycling symbol ♺.Comply with the local regulations for disposal. The packing materials (plastic bags, polystyrene, etc.) are a potential source of danger and must be kept out of the reach of children.

2. Product

This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).
By ensuring that this appliance is correctly scrapped, the user can help prevent potentially harmful consequences for the environment and the health of people.

The symbol on the product or the accompanying documentation indicates that this product should not be treated as domestic waste but must be taken to a suitable collection centre for the recycling of electrical and electronic equipment. Disposal must be carried out in compliance with local regulations on waste disposal.
For further information on the treatment, recovery and recycling of this product, contact the competent local office, the household waste collection service or the shop where you purchased the appliance.

IMPORTANT INSTRUCTIONS FOR SAFETY

⚠ **WARNING:** To reduce the risk of accidents, electric shock, injury or damage, when using the hood comply with the basic precautions, including the following.

1. Always disconnect the hood from the power supply before carrying out any installation or maintenance operation on the appliance.
2. Installation must be carried out by a specialised technician, in compliance with the manufacturer's instructions and local safety regulations.
3. Earthing of the appliance is compulsory. (Not possible for Class II hoods).
4. Never use multisockets and extension leads.
5. The electrical components must no longer be accessible to the user after installation.
6. Do not touch the hood with wet parts of the body or use it when barefoot.
7. Do not pull the appliance power cable to unplug it.
8. After-sales service – do not repair or replace any part of the hood unless specifically indicated in the manual. All other maintenance services must be carried out by a specialised technician.
9. When drilling the wall, make sure not to damage the electrical connections and/or pipes.
10. The ventilation ducts must always discharge to the outside.
11. The Manufacturer declines any liability for improper use or incorrect setting of the controls.
12. The appliance is not intended for use by children or persons with limited physical, sensory or mental abilities or without experience and knowledge of it, unless they are under the supervision of or instructed in its use by a person responsible for their safety.
13. Keep children away.
14. To reduce the risk of fire, only use a metal inlet duct.
15. Children must be supervised so that they do not play with the appliance.
16. The product must be disposed of in compliance with local regulations on waste disposal.
17. For further information on the treatment, recovery and recycling of this product, contact the competent local office, the household waste collection service or the shop where you purchased the appliance.
18. Regular cleaning and maintenance is essential for correct hood operation and good performance. Frequently clean all encrustations from dirty surfaces to prevent the accumulation of grease. Regularly clean or replace filters.
19. Do not "flambé" food under the hood. Naked flames could cause a fire.
20. The room must have adequate ventilation when the hood is used at the same time as appliances operating on gas or other fuels.
21. The discharge air must not be eliminated in a duct used to remove fumes produced by appliances operating on gas or other fuels, but must have a separate outlet. All the national regulations on air discharge envisaged by art. 7.12.1 of CEI EN 60335-2-31 must be observed.
22. If the hood is used together with other appliances operating on gas or other fuels, the negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar). Therefore, make sure the room is adequately ventilated.
23. Do not leave pans unattended when frying, since the cooking oil could catch fire.
24. Make sure the lamps are cold before touching them.
25. The hood is not a shelf, therefore do not overload or place objects on it.
26. Do not use or leave the hood without its lamps correctly installed - risk of electric shock.
27. Wear work gloves for all installation and maintenance operations.
28. The product is not suitable for outdoor use.
29. The air sucked by the hood must not be eliminated through the same flue of the heating system or other appliances using gas or other fuels.

Electrical connection

The mains voltage must match that given on the rating plate located inside the hood. If provided with a plug, connect the hood to a socket complying with the current regulations and located in an accessible area. If it does not have a plug (direct connection to the power supply) or if the plug is not in an accessible place, fit a suitable double-pole switch that ensures complete disconnection from the power supply in category III overvoltage conditions, complying with the installation rules.

⚠ **WARNING:** Before reconnecting the hood circuit to the power supply and checking correct operation, always make sure the power cable is correctly fitted and that it was NOT crushed in its housing during installation. Make sure to have this operation carried out by a specialised technician.

Cleaning the hood

⚠ **WARNING:** Failure to remove oil/grease (at least once a month) could result in fire.

Use a soft cloth with a neutral detergent. Never use abrasive substances or alcohol.

Before using the hood

Please read these instructions carefully and keep them for future reference, in order to ensure best use of your hood.

The packing materials (plastic bags, polystyrene, etc.) are a potential source of danger and must be kept out of the reach of children.

Make sure the hood has not been damaged during transport.

Declaration of conformity

This product has been designed, manufactured and put on the market in conformity with:

- safety objectives of the "Low Voltage" Directive 2006/95/EC (which replaces 73/23/EEC as amended)
- protection requirements of "EMC" Directive 89/336/EEC amended by Directive 93/68/EEC.

Troubleshooting guide

If the hood does not work:

- Is the plug properly inserted in the power socket?
- Is there a power failure?

If the hood is not extracting enough:

- Is the right speed selected?
- Do the filters need cleaning or replacing?
- Are the air outlets blocked?

If the lamp does not work:

- Does the lamp need replacing?
- Is the lamp correctly fitted?

AFTER-SALES SERVICE

Before calling the After-Sales Service

1. Check to see if you can fix the problem yourself (see "Troubleshooting Guide").
2. Switch the appliance off and then on again to check if the problem has been eliminated.
3. If the problem persists, contact the After-Sales Service.

Specify:

- the type of fault,
- the product model given on the dataplate inside the hood, visible on removing the grease filters,
- your full address,
- your telephone number and area code,
- the Service code (the number under the word SERVICE on the dataplate inside the hood, behind the grease filter).

If any repairs are necessary, contact an authorised Service Centre (to ensure the use of original spare parts and correct repair).

Failure to comply with these instructions can compromise the safety and quality of the product.

SERVICE

0000 000 00000

The hood is designed for use in "**Filter version**"

Filter version

(see symbol in the installation handbook)

Air is filtered through the carbon filter/s and recycled into the surrounding environment.

Important: Ensure that air recirculation is facilitated (carefully follow the instructions given in the installation handbook)

Important! If the hood does not have a carbon filter/s, it/they must be ordered and fitted before use.

The hood is provided with hardware (e.g. screws and/or plugs) suitable for most walls/ceilings. However, it is necessary to contact a qualified technician to ensure suitability according to the type of wall/ceiling. The wall/ceiling must be strong enough to take the weight of the hood.

Very heavy product; hood handling and installation must be carried out by at least two persons.

PRODUCT SHEET

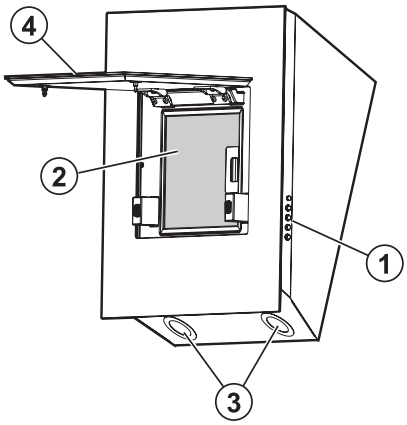

1. Control panel.
2. Grease filter
3. Light
4. Panel

Bulb maintenance

1. Disconnect the hood from the power supply.
2. Use a small screwdriver or another suitable tool to prise and remove the lighting unit (**Fig.1**).
3. Replace the damaged lamp.
4. Only use 20 W max. - G4 halogen lamps, taking care not to touch them with hands.
5. Close the lighting unit (snap-on).

Grease filters:

The metal grease filter has an unlimited life and must be washed once a month by hand or in a dishwasher at a low temperature and with short cycle. Washing in a dishwasher can cause the grease filter to become opaque, but its filtering capacity is not affected.

Grease filter maintenance:

1. Disconnect the electrical power supply.
2. Open the panel.
3. **Remove the grease filter/s (Fig. 2)**; to do so, pull the spring release handle (f1) then remove the filter/s (f2).

Carbon filter maintenance

(for models with filter installation):

The carbon filter must be washed once a month in a dishwasher at the highest temperature, using a normal dishwasher detergent. It is advisable to wash the filters separately.
After washing, reactivate the carbon filter by drying it in the oven at 100° C for 10 minutes.
Change carbon filter every 3 years

Fitting the carbon filter:

1. Open the panel and remove the grease filter (**Fig. 2**).
2. Install the carbon filter behind the grease filter and fasten with two fixing elements (**Fig. 3**).

To remove the filter, proceed in reverse order.

CONTROL PANEL

- ON/OFF Light switch
- Extraction and minimum extraction speed ON/OFF switch.
- + Extraction and medium extraction speed ON/OFF switch.
- + Extraction and maximum extraction speed ON/OFF switch.

.

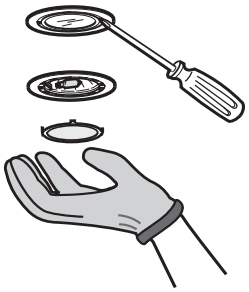

Fig. 1

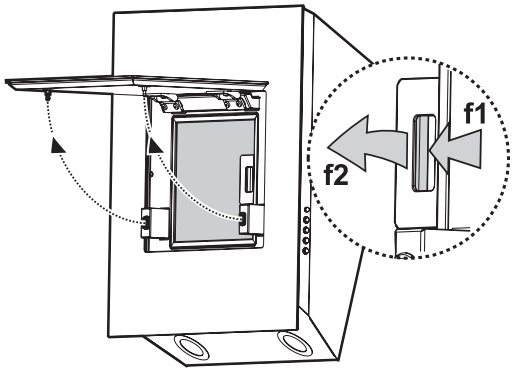

Fig. 2

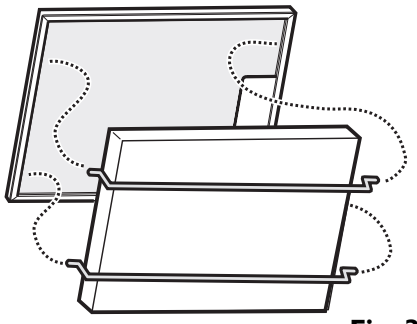

Fig. 3